

GUÍA BUJÍAS YAMAHA

MODELO	NGK	DENSO
2B	NGK BR5HS	
F2,5A/F4A	NGK BR6HS	
3A/F6A/F8C/FT8D/F9,9F/F9,9J/FT9,9G/FT9,9L	NGK BR6HS-10	
F4B/F5A/F6C	NGK CR6HS	
4A/5C/20C/25D/40X	NGK BR7HS	W22FSR
6C/8C/9,9D/9,9F/15D/15F/20D/25N/25V/25B/30D/40H/40V	NGK BR7HS-10	
F8B	NGK CR5HSB	
F9,9A/F9,9B	NGK CR6HS	
F9,9C/FT9,9D/F15A/F25A/FT25B/F30A/F40A/F40B/F50A/FT50B/FT50C	NGK DPR6EA-9	
F15C/F20B/F25D/F25G/FT25F/F30B/F40F/F50F/F50H/FT50G/FT50J/F60C/F60F/FT60D/FT60G	NGK DPR6EB-9	
40Q	NGK BR8HS	
30G/50D/50G/50H/55B/60F/70B/75A/75C/80A/85A/90A/100A/115A/115B/115C/140A/	NGK BR8HS-10	
150A/150C/150F/175A/175B/175D/200A/200B/200F/200G/225D/(L)250A/(L)250G	NGK BR8HS-10	
F60A/FT60B	NGK DPR5EA-9	
F70A	NGK KLKR7E	
F80A/F80B/F100A/F100B/F100D/F(L)150A/F(L)200A/F(L)225A	NGK KLFR5A-11	
130B/140B/200C/225B/250B/225G (VMAX)	NGK BR9HS-10	
F(L)115B	NGK KLKR6E	
F(L)115A/F175A/F(L)200C/F(L)200F/F(L)200G/F(L)225B/F225C/F(L)250A/F(L)250B/F(L)	NGK KLFR6A-11	
300A/F(L)350A/F(L)225F/F(L)250D/F(L)300B(L)Z150P/Z150Q (VMAX)	MKG BKR6EKU	
Z175G/(L)Z200N/Z200P (VMAX)/(L)Z250D/Z250F (VMAX)/(L)Z300A	MKG BKR7EKU	
STERN-DRIVE ESSENCE	NGK BR6FS	TR20R-U
WAVERUNNER		
XL800/XLT800/GP800/WB800/GP800R	NGK BR8ES	
XLT1200/XL1200LTD/GP1200R/GP1300R	NGK BR8ES-11	
SJ650/650T/650TL/650TX/FX1/PRO TX700/WB700/XL700/WVT700/W.RAIDER 760/	NGK BR8HS	
/WVT760/XL760/WB760/GP760/W.RAIDER 1100/ WVT1100/SUV1200/GP1200/XL1200	MKG BR8HS	
SJ700/W.RAIDER 700	NGK BR7HS	W22FSR
FX140/FX140 CRUISER/FX160/FX160 CRUISER/FX1100 HO/HO CRUISER/VX 1100 SPORT & DELUXE	NGK CR9EB	